

# PTS0805

# 6-24 Volt DC surface mount resettable PTC devices



#### **Product features**

- Positive Temperature Coefficient (PTC)
- SMT resettable device
- · Low resistance
- 6 to 24 volts
- Current ratings from 0.1 A to 0.75 A
- · Fast time-to-trip
- Small EIA size 0805 (2012 metric) footprint

#### **Applications**

- USB Peripherals
- · Disk drives
- · Power tools
- · Rechargeable battery pack protection
- Plug and play protection for motherboards and peripherals
- Mobile phones battery and port protection
- Game console port protection
- Digital cameras
- · Set-top boxes
- Tablets/notebooks/netbooks

#### **Agency information**

- cURus Recognized card, File No: E343021
- TÜV, File: R 50283843

#### Part number system/ordering:

PT S 0805 6V 035

- PT = PolyTron™ PTC device series
- · S = Surface mount
- 0805 = Dimension code
- 6V = Maximum voltage
- 035 = Current hold  $(I_{hold})$



### Product specifications- (+23 °C)

								,	Resis	tance (Ω)		
Catalog	Part	V <sub>max</sub>	l <sub>max</sub>	l <sub>hold</sub>	I	P <sub>d</sub> Max.	Time to t	trip (max.)	Initial (R <sub>i</sub> )	Post trip (R <sub>1</sub> )	Agency in	formation
Number	Marking	(Vdc)	(amps)	(amps)	(amps)	(VV)	(Amps)	(Sec)	Min.	Max.	cURus	TUV
PTS080524V010	D	24	100	0.1	0.30	0.5	0.5	1.5	1.0	6.0	X	X
PTS08059V020	L	9	100	0.2	0.50	0.5	8.0	0.05	0.65	3.5	X	X
PTS08056V035	Т	6	100	0.35	0.75	0.5	8.0	0.1	0.25	1.2	X	X
PTS08056V050	0	6	100	0.5	1.00	0.5	8.0	0.2	0.15	0.85	X	X
PTS08056V075	Х	6	100	0.75	1.50	0.5	8.0	0.3	0.09	0.40	Х	Х


#### Notes:

I<sub>hold</sub> - Hold current: Maximum current device will pass without interruption in +23 °C still air.


R<sub>1</sub>(max.): Maximum resistance of device when measured one hour post reflow (SMD) or one hour post trip (radial-leaded device) at 23°C unless otherwise specified.

#### **Dimensions - mm**

Part Number	C Max.
PTS080524V010	1.00
PTS08059V020	1.00
PTS08056V035	0.75
PTS08056V050	1.25
PTS08056V075	1.25

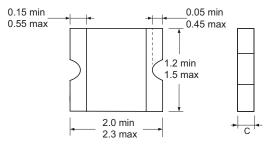

#### Recommended land pattern - mm (in)



### **Environmental specifications**

Characteristic	Value		
Operating temperature range	-40 °C to +85 °C		
Surface temperature in tripped state	+125 °C max.		
The amount of the sale	+85 °C to -40 °C, 20 cycles,		
Thermal shock	-33% typical resistance change		
Solvent resistance	MIL-STD-202 Method 215, no change		
	Specified temperature (+23 °C ± 3		
Humidity age test	°C)+85 °C, 85% RH, 100 hours		
	±5% typical resistance change.		
Storage temperature range	-10 °C to +40 °C		
Storage duration	One year		
Storage relative humidity	≤75%		
Storage conditions	Keep away from corrosive atmosphere and sunlight		

#### Terminal material:

Nickel/tin-plated copper

I<sub>trip</sub> – Trip current: Minimum current that will switch the device from low resistance to high resistance in +23 °C still air.


 $V_{\text{max}}$ : Maximum continuous voltage device can withstand without damage at rated current.


 $I_{\text{max}}$ : Maximum fault current device can withstand without damage at rated voltage.

 $P_d$ : Power dissipated from device when in the tripped state in +23 °C still air.


R<sub>i</sub> (min.): Minimum resistance of device as supplied at +23 °C unless otherwise specified.

### Time to trip curves at 23°C



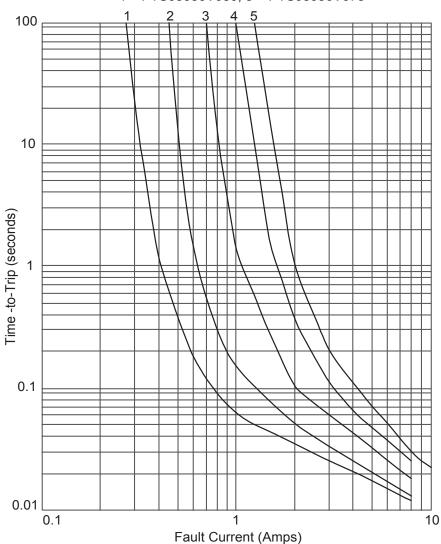


# Temperature derating curve

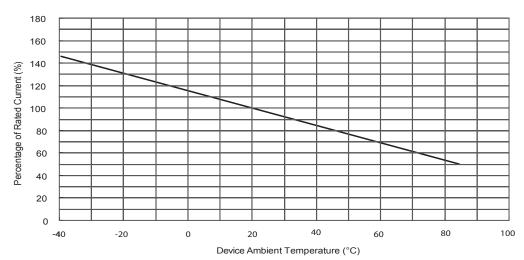


### Packaging information - mm

4000 devices per 178 mm diameter reel

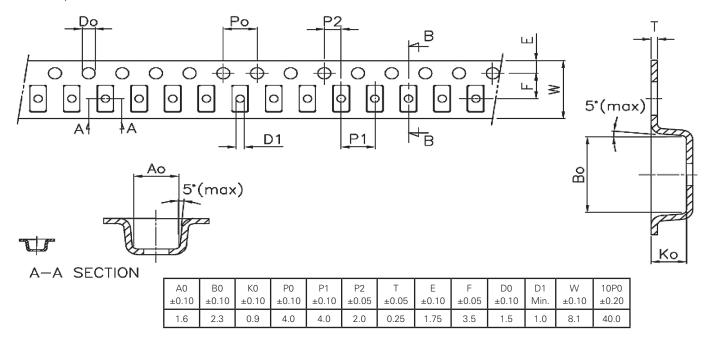


# **Reel specifications**

4000 devices per 178mm diameter reel

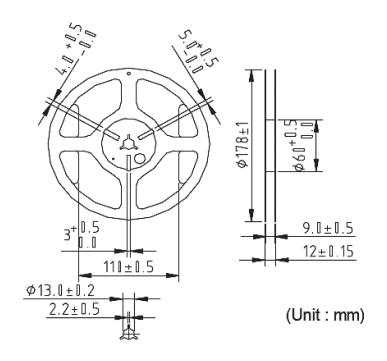

#### Solder reflow profile

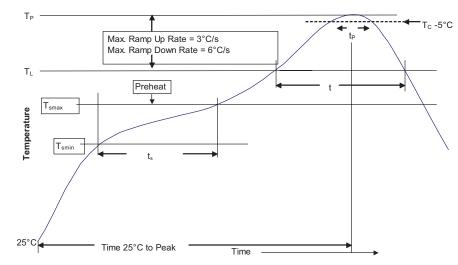

-<sub>Tc-5°C</sub> Table 1 - Standard SnPb Solder (T<sub>C</sub>)

Package Thickness	Volume mm3 <350	Volume mm3 ≥350	
<2.5mm)	235°C	220°C	
≥2.5mm	220°C	220°C	

Table 2 - Lead (Pb) Free Solder (T<sub>C</sub>)

Package Thickness	Volume mm³ <350	Volume mm³ 350 - 2000	Volume mm³ >2000
<1.6mm	260°C	260°C	260°C
1.6 – 2.5mm	260°C	250°C	245°C
>2.5mm	250°C	245°C	245°C

#### **Reference JDEC J-STD-020**

Standard SnPb Solder	Lead (Pb) Free Solder	
100°C	150°C	
150°C	200°C	
60-120 Seconds	60-120 Seconds	
3°C/ Second Max.	3°C/ Second Max.	
183°C 60-150 Seconds	217°C 60-150 Seconds	
Table 1	Table 2	
20 Seconds**	30 Seconds**	
6°C/ Second Max.	6°C/ Second Max.	
6 Minutes Max.	8 Minutes Max.	
	100°C 150°C 60-120 Seconds 3°C/ Second Max. 183°C 60-150 Seconds Table 1 20 Seconds** 6°C/ Second Max.	

<sup>\*</sup> Tolerance for peak profile temperature (T<sub>n</sub>) is defined as a supplier minimum and a user maximum.

#### Wave solder

Reservoir temperature: 260°C

Time in reservoir: 10 seconds maximum

Life Support Policy: Eaton does not authorize the use of any of its products for use in life support devices or systems without the express written approval of an officer of the Compan. Life support systems are devices which support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant inju y to the user.

Eaton reserves the right, without notice, to change design or construction of any products and to discontinue or limit distribution of any products. Eaton also reserves the right to change or update, without notice, any technical information contained in this bulletin.

Eaton Electronics Division 1000 Eaton Boulevard Cleveland, OH 44122 United States www.eaton.com/electronics

© 2017 Eaton All Rights Reserved Printed in USA Publication No. 10130 BU-SB14562 August 2017



<sup>\*\*</sup> Tolerance for time at peak profile temperature (t<sub>p</sub>) is defined as a supplier minimum and a user maximum.

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

# Eaton:

PTS08056V035 PTS08056V050 PTS08059V020 PTS08056V075 PTS08059V010 PTS080524V010