
## Hub40/Hub40A LED Hub Card

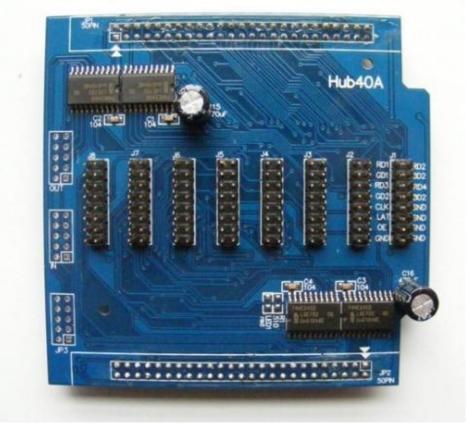

- Model:LINSN-HUB40A
- In Stock
- Warranty: 2 Years
- Product Description: linsn hub40a led data transmit card with 2 years warranty,hub40 led hub card work with RV901,RV801 led receiving card

## linsn hub40a led data transmit card with 2 years warranty,hub40 led hub card work with RV901,RV801 led receiving card

Function : Allocate the right signals of receiving card to led display module.

Specification:

• Socketed in RV801 and rv901 led receiver.

- HUB Model is chosen according to the pin-out of LED Module.
- To allocate the right signals to LED Module pins.
- Use flat cable (IDE).
- If the HUB pin-outs is not exactly the same as the outdoor led module pin-ins,jumper wire can be applied.
- Note:

N= GND, L= LAT or ST, S= Clk, O= OE, E=/OE R=red data, G=green data, U=blue data, A,B,C,D= row signal, H=after decoding row signal F=NC, V=VCC.