

Series: Ceramic Chip Antenna

TECHNICAL DATA SHEET

Description: 868MHz Monopole SMD

Antenna

PART NUMBER: W3016

Features:

- 863-870MHz
- Monopole radiator
- · Gain -3dBi
- Size 10 x 3.2 x 4 mm
- Optimized for small PCB
- Easy tuning with matching circuit



Applications:

- ISM 868MHz radios
- Sigfox
- LoRa
- IoT, M2M
- · Sensors, monitors

All dimensions are in mm

Issue: 1918

In the effort to improve our products, we reserve the right to make changes judged to be necessary. CONFIDENTIAL AND PROPRIETARY INFORMATION

This document contains confidential and proprietary information of Pulse Electronics, Inc. (Pulse) and is protected by copyright, trade secret and other state and federal laws. Its receipt or possession does not convey any rights to reproduce, disclose its contents, or to manufacture, use or sell anything it may describe. Reproduction, disclosure or use without specific written authorization of Pulse is strictly forbidden. For more information:

Pulse Worldwide Headquarters 15255 Innovation Drive #100 San Diego, CA 92128 USA Tel:1-858-674-8100 Pulse/Larsen Antennas 18110 SE 34th St Bldg 2 Suite 250 Vancouver, WA 98683 USA Tel: 1-360-944-7551 Europe Headquarters Pulse GmbH & Do, KG Zeppelinstrasse 15 Herrenberg, Germany Tel: 49 7032 7806 0 Pulse (Suzhou) Wireless Products Co, Inc. 99 Huo Ju Road(#29 Bldg,4th Phase Suzhou New District Jiangsu Province, Suzhou 215009 PR China Tel: 86 512 6807 9998



Description: 868MHz Monopole SMD

Antenna

PART NUMBER: W3016

Series: Ceramic Chip Antenna

ELECTRICAL SPECIFICATIONS

Antenna Type	Ceramic HTC
Frequency	863-870 MHz
Nominal Impedance	$50~\Omega$
Return Loss	<-15 dB
Radiation Pattern	Omni
Gain	>-3 dBi
Efficiency	>20%
Polarization	Vertical
Power Withstanding	2 W

MECHANICAL SPECIFICATIONS

Overall Length 10x3.2x4mm

Weight 0.6g

Antenna Color / Material Ceramic Grey / Silver

Moisture Sensitivity Level MSL1

ENVIRONMENTAL SPECIFICATIONS

Operating Temperature -40 to +85 ° C
Storage Temperature -40 to +85 ° C
RoHS Compliant Yes

Above electrical specification tested on 25x25mm sized PCB






Description: 868MHz Monopole SMD

Antenna

PART NUMBER: W3016

Series: Ceramic Chip Antenna

MECHANICAL DRAWING

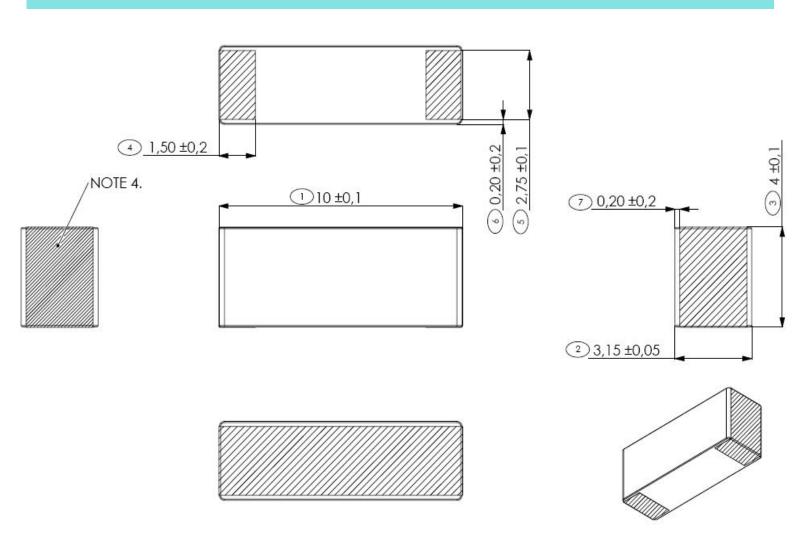

С	Terminal Name	Terminal Dimensions
1	Feed	1.5 x 2.75 mm
2	Support pad	1.5 x 2.75 mm

Antenna is symmetrical and orientation on footprint can be rotated 180 degrees without change in performance





Description: 868MHz Monopole SMD


Antenna

PART NUMBER: W3016

Series: Ceramic Chip Antenna

MECHANICAL DRAWING

Test Board Layout

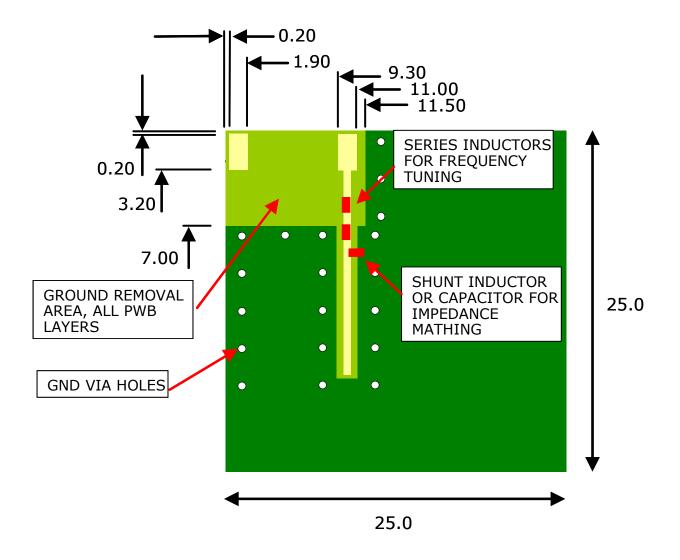





Description: 868MHz Monopole SMD

Antenna


PART NUMBER: W3016

Series: Ceramic Chip Antenna

TEST SETUP



Test on Pulse test board with ferrite bead test cable.

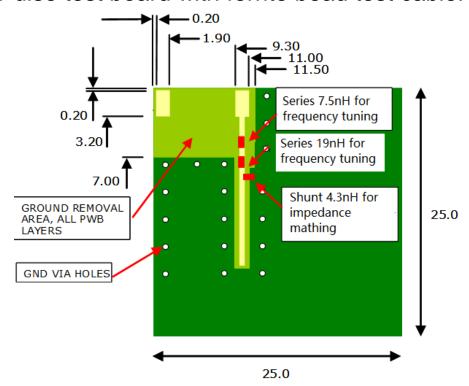

Matching circuit for reference





Description: 868MHz Monopole SMD


Antenna

PART NUMBER: W3016

Series: Ceramic Chip Antenna

CHARTS

Return loss on Test board

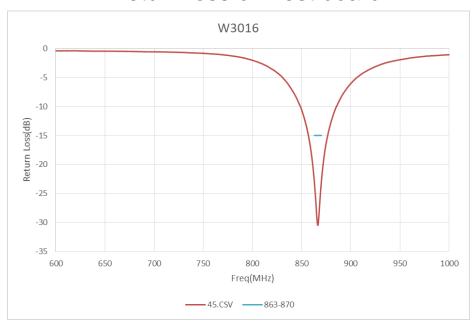

Radiation Efficiency on Test board



Issue: 1918

ROHS



Description: 868MHz Monopole SMD


Antenna

PART NUMBER: W3016


Series: Ceramic Chip Antenna

CHARTS

Peak Gain on Test board

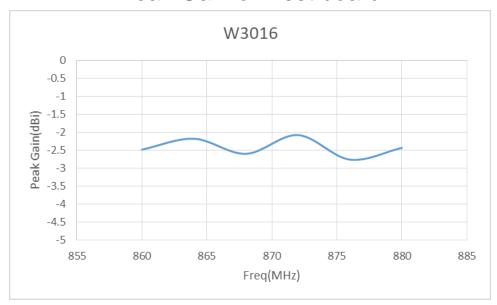

Radiation pattern at XY plane

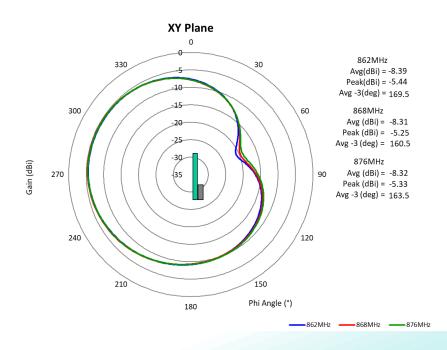







Description: 868MHz Monopole SMD


Antenna

PART NUMBER: W3016


Series: Ceramic Chip Antenna

CHARTS

Radiation pattern at ZX plane

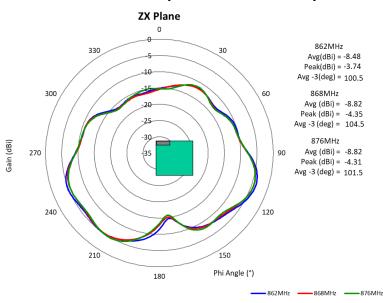

Radiation pattern at YZ plane

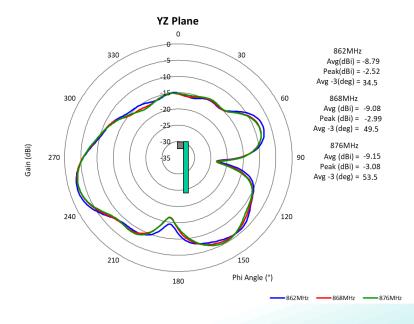



Description: 868MHz Monopole SMD

Antenna

PART NUMBER: W3016

Series: Ceramic Chip Antenna

PACKAGING


500pcs antennas per 7" reel

3pcs reel per inner box


2pcs inner box per outer box

Total 3000pcs antenna per package box

Package box: 390mm*215mm*165mm

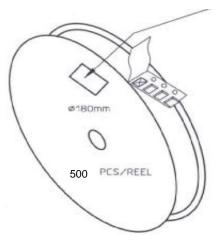

Label area

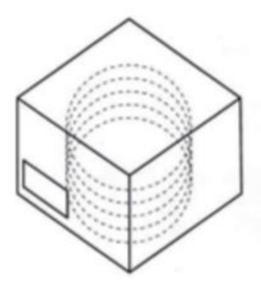

According to MSL1 packing requirement, MBB-Moisture Barrel Bag, Desiccant, HIC-Humidity Indicator Card, MSID Label, Caution Label are required.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Pulse:

W3016 W3016-K